


FLEXIJOINT®

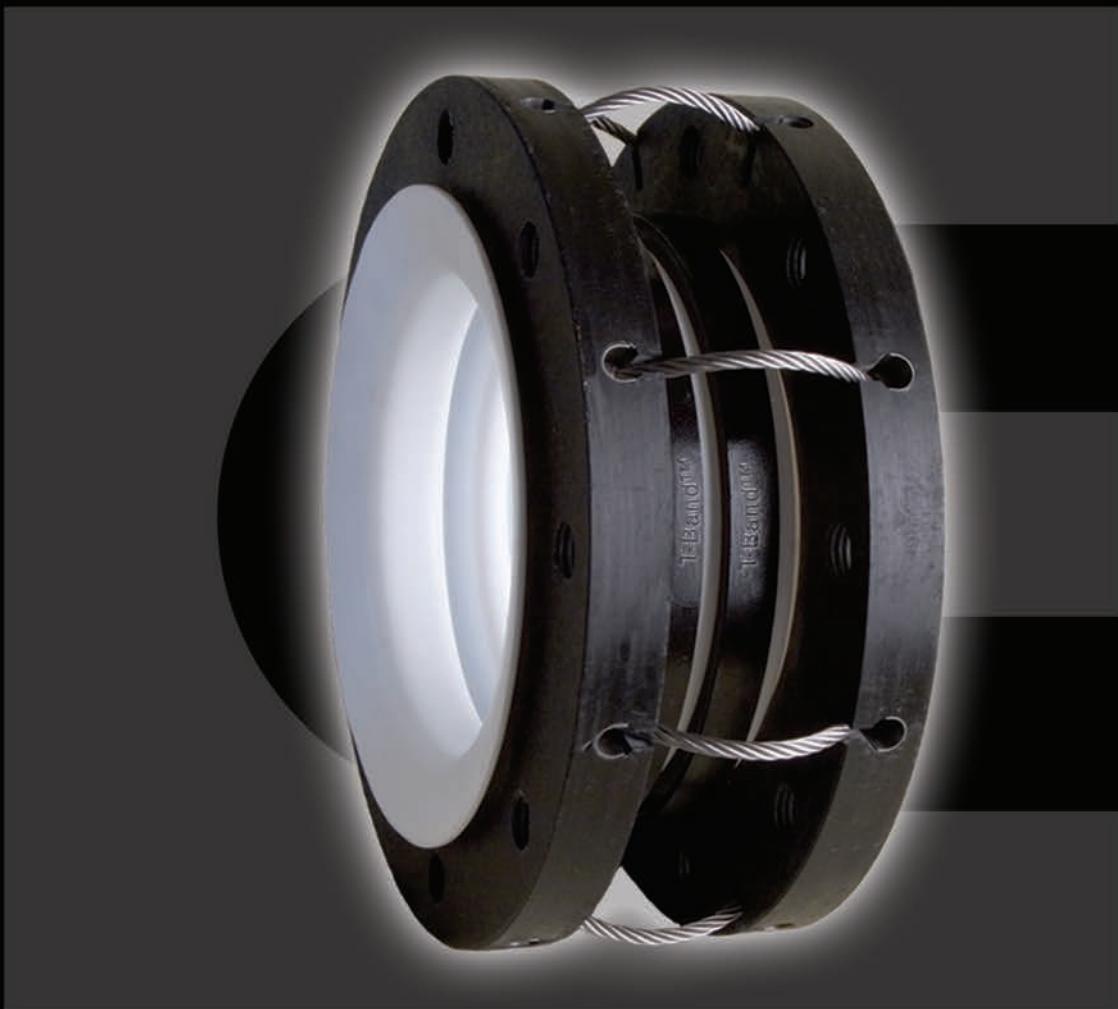

Condensed Brochure

*** For Full Version (72) Page Brochure Request "Flexijoint 1206" ***

ETHYLENE™
an ANDRONACO INDUSTRIES company

Flexijoint: The Severe Service Standard

FLEXIJOINT®

1 Pure 100% Virgin PTFE Resin


The unmatched performance of Flexijoint is due to its exclusive Fluoroforming™ process, a development of Ethylene. The Fluoroforming™ process employs only high molecular weight resin to utilize pure PTFE with no pigments or additives which might contaminate contacting fluids by leaching out and/or becoming vulnerable to blistering. In addition, high molecular weight with tightly controlled crystallinity, inherent in the Ethylene Fluoroforming™ process, results in lower permeation rates, outstanding flex-life and maximum tensile strength.

Competitors which use paste extruded resin are NOT using Pure PTFE. They must mix a hydrocarbon such as Isopar to facilitate PTFE paste extruding.

3 T-Band™

Root & Sidewall Support


Flexijoint T-Band™ reinforcement on the outside of the convolutions supports the convolution root and sidewall for improved service life and increased safety in high pressure applications. As pressure and temperature increase, the sidewall of the PTFE convolutions conform to the contour of the T-Band™, improving stability under pressure.

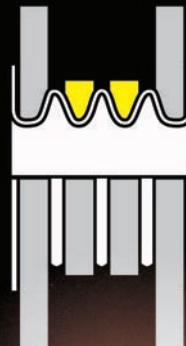

2 Uniform Wall Thickness

Ethylene's exclusive Fluoroforming™ process guarantees multiple convolution walls of constant uniform thickness for any size. This relationship of heavy wall and geometry is one of the basic reasons for the outstanding performance of Flexijoins. Deep convolutions allow increased axial travel and also reduce the force necessary to produce movement or lateral misalignment. As a result, Flexijoins have a longer service life when compared to conventional blow molded or stretch molded expansion joints which introduce stress points and exhibit alarming thinning of the convolution wall and root.

Note: Blow-Molding is sometimes referred to as "Contour" molding by some manufacturers.

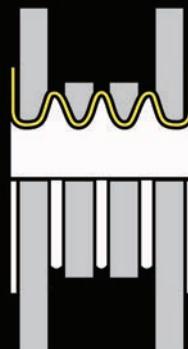


Actual Flexijoint

Distinctive Features


4 T-Band™ Protection From Over Compression

Flexijoint T-Band™ metal reinforcement on the outside of the convolutions not only contributes to the pressure rating of the Flexijoint but also limits the total axial movement in compression. The shoulders of the T-Band™ are designed to butt when maximum compression limit has been reached to provide protection from excessive compression for improved safety and increased service life.

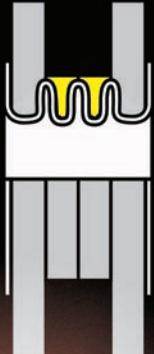

5 LimitLinks™ Protection From Over Expansion


LimitLinks™ consist of stainless steel cables conforming to MIL-C5424, Government specification for Aircraft Cable, at the ends of which are stainless steel ball-shaped terminals that are swaged. The opposite ends of the LimitLink™ are firmly anchored in the Flexijoint flanges in a manner which limits over expansion of the Flexijoint but also leaves the terminals free to swivel as the flanges change position relative to each other during their adjustment to angular misalignment, parallel misalignment, purely axial motion or a combination of all three.

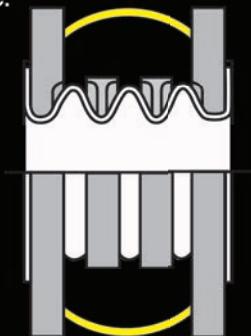


6 LimitLinks™ & T-Band™ Additional Benefits

LimitLinks™ provide easy installation even when the mating flange bolts don't align. They also won't get in the way and they never need to be removed for installation unlike competitors LimitBolt designed expansion joints which may void warranties.

T-Bands™ cover approximately 75% of the outside of the convolution when not compressed to provide protection from external damage such as falling tools or weld splatter.

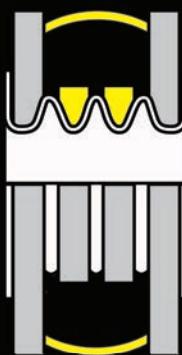


Quick Sele

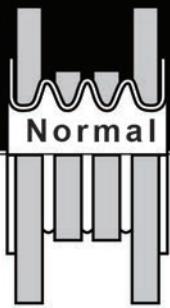

Normal



Contracted


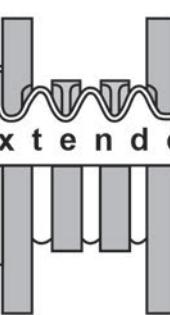


Extended

LENGTHS (NORMAL, CONTRACTED, EXTENDED)*

SIZE In.	2 convolutions		3 convolutions		4 convolutions		5 convolutions		6 convolutions	
	NORMAL LENGTH	PLUS OR MINUS TRAVEL								
1/2	1.63	0.31	2.17	0.47	2.68	0.63	3.23	0.79	3.78	0.95
3/4	1.63	0.31	2.20	0.47	2.72	0.63	3.27	0.79	3.82	0.95
1	1.75	0.35	2.32	0.51	2.91	0.67	3.50	0.83	4.06	0.95
1-1/4	1.78	0.35	2.38	0.51	2.95	0.67	3.56	0.83	4.17	1.00
1-1/2	1.81	0.35	2.40	0.51	3.00	0.67	3.62	0.87	4.21	1.00
2	1.88	0.35	2.50	0.51	3.13	0.71	3.74	0.87	4.37	1.00
2-1/2	2.13	0.39	2.80	0.59	3.54	0.83	4.25	0.98	4.90	1.00
3	2.20	0.39	2.91	0.63	3.62	0.83	4.37	1.02	5.08	1.00
4	2.28	0.43	3.07	0.67	3.82	0.87	4.57	1.10	5.35	1.00
5	2.41	0.47	3.22	0.69	4.03	0.91	4.84	1.16	5.63	1.00
6	2.53	0.47	3.38	0.72	4.19	0.97	5.03	1.19	5.88	1.00
8	2.75	0.53	3.66	0.78	4.59	1.06	5.50	1.31	6.41	1.00
10	2.97	0.56	3.94	0.84	4.94	1.13	5.94	1.41	6.91	1.00
12	3.19	0.59	4.25	0.91	5.31	1.22	6.38	1.53	7.44	1.00
14	3.38	0.63	4.47	0.97	5.59	1.28	6.72	1.59	7.84	1.00
16	3.69	0.69	4.91	1.06	6.13	1.41	7.34	1.75	8.56	1.00
18	4.00	0.75	5.34	1.16	6.69	1.53	8.03	1.91	9.34	1.00
20	4.16	0.78	5.53	1.19	6.94	1.59	8.31	1.97	9.69	1.00
24	4.66	0.88	6.22	1.34	7.78	1.78	9.31	2.22	10.88	1.00
28	5.12	1.00	6.89	1.50	8.56	2.00	10.31	2.44	12.00	1.00
30	5.63	1.06	7.53	1.63	9.41	2.16	11.31	2.69	13.19	1.00
32	5.63	1.06	7.53	1.63	9.41	2.16	11.31	2.69	13.19	1.00
36	6.31	1.25	8.44	1.84	10.53	2.41	12.63	2.84	14.75	1.00
42	7.00	1.38	9.38	2.00	11.69	2.69	14.00	3.38	16.38	1.00

ANGULAR & LATERAL MISALIGNMENT

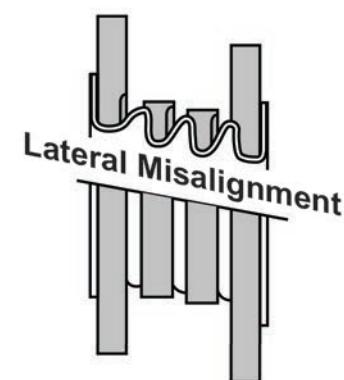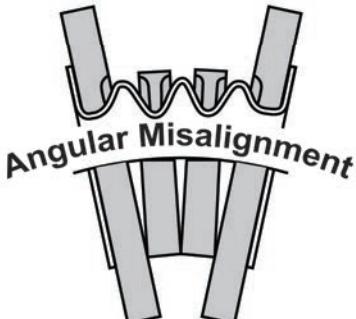

SIZE In.	2 convolutions		3 convolutions		4 convolutions		5 convolutions		6 convolutions	
	ANGULAR	LATERAL								
1/2	19°	0.24	28°	0.35	37°	0.47	45°	0.55	53°	0.63
3/4	17°	0.24	25°	0.35	34°	0.47	41°	0.59	49°	0.63
1	16°	0.24	24°	0.39	31°	0.51	39°	0.63	45°	0.63
1-1/4	14°	0.24	21°	0.39	28°	0.51	34°	0.63	41°	0.63
1-1/2	13°	0.24	20°	0.39	26°	0.51	32°	0.67	40°	0.67
2	12°	0.28	17°	0.39	23°	0.51	29°	0.67	34°	0.67
2-1/2	11°	0.31	17°	0.47	22°	0.59	28°	0.75	33°	0.75
3	10°	0.31	15°	0.47	20°	0.63	25°	0.79	30°	0.79
4	9°	0.31	13°	0.51	17°	0.67	21°	0.83	26°	0.83
5	8°	0.34	11°	0.53	15°	0.69	19°	0.88	23°	1.00
6	7°	0.38	10°	0.53	14°	0.72	17°	0.91	20°	1.00
8	6°	0.41	9°	0.59	12°	0.78	15°	0.97	18°	1.00
10	5°	0.44	8°	0.63	11°	0.84	13°	1.06	16°	1.00
12	5°	0.47	7°	0.69	10°	0.91	12°	1.13	14°	1.00
14	5°	0.47	7°	0.72	9°	0.97	12°	1.19	14°	1.00
16	5°	0.53	7°	0.78	9°	1.06	11°	1.31	13°	1.00
18	4°	0.56	7°	0.88	9°	1.16	11°	1.44	13°	1.00
20	4°	0.59	6°	0.91	8°	1.19	10°	1.50	12°	1.00
24	4°	0.66	6°	1.00	8°	1.34	10°	1.66	12°	1.00
28	4°	0.75	6°	1.14	8°	1.46	10°	1.81	12°	1.00
30	4°	0.81	6°	1.19	8°	1.63	10°	2.00	12°	1.00
32	4°	0.81	6°	1.19	8°	1.63	10°	2.00	12°	1.00
36	4°	0.94	6°	1.38	8°	1.81	10°	2.25	12°	1.00
42	2°	1.00	4°	1.50	6°	2.00	8°	2.50	10°	1.00

JOINT®

ction Guide

	7 convolutions		8 convolutions		9 convolutions		10 convolutions		11 convolutions		12 convolutions	
S OR VEL	NORMAL LENGTH	PLUS OR MINUS TRAVEL										
94	4.31	1.06	4.84	1.22	5.39	1.38	5.94	1.54	6.50	1.69	7.06	1.84
94	4.37	1.10	4.92	1.26	5.47	1.42	5.98	1.57	6.56	1.72	7.13	1.88
98	4.65	1.14	5.22	1.30	5.81	1.50	6.00	1.65	7.00	1.81	7.59	2.00
02	4.76	1.18	5.35	1.38	5.94	1.54	6.54	1.69	7.13	1.88	7.72	2.06
02	4.80	1.22	5.41	1.38	6.02	1.57	6.63	1.73	7.25	1.91	7.88	2.09
06	4.96	1.26	5.59	1.46	6.22	1.57	6.85	1.77	7.47	2.00	8.09	2.19
22	5.67	1.42	6.38	1.61	7.05	1.81	7.80	2.05	8.50	2.25	9.19	2.47
26	5.83	1.46	6.57	1.65	7.28	1.89	7.99	2.09	8.72	2.31	9.44	2.56
30	6.10	1.54	6.89	1.73	7.64	1.97	8.41	2.20	9.19	2.44	9.94	2.69
38	6.44	1.63	7.25	1.84	8.06	2.06	8.84	2.31	9.66	2.56	10.44	2.81
44	6.72	1.69	7.56	1.91	8.41	2.16	9.25	2.41	10.09	2.66	10.94	2.91
56	7.34	1.84	8.25	2.09	9.16	2.34	10.09	2.63	11.00	2.91	11.94	3.19
69	7.91	1.97	8.88	2.25	9.88	2.53	10.84	2.81	11.84	3.09	12.81	3.38
81	8.50	2.13	9.56	2.44	10.63	2.75	11.72	3.03	12.81	3.34	13.88	3.66
91	8.97	2.25	10.09	2.56	11.19	2.88	12.31	3.19	13.44	3.50	14.56	3.81
09	9.81	2.44	11.03	2.81	12.25	3.16	13.47	3.50	14.69	3.88	15.94	4.25
28	10.69	2.69	12.03	3.06	13.38	3.44	14.72	3.81	16.06	4.19	17.41	4.56
38	11.09	2.78	12.47	3.16	13.88	3.56	15.25	3.97	16.63	4.38	18.00	4.81
66	12.44	3.09	14.00	3.56	15.53	4.00	17.09	4.44	18.63	4.88	20.19	5.31
95	13.74	3.43	15.43	3.94	17.20	4.45	18.86	4.88	20.63	5.38	22.31	5.87
22	15.06	3.75	16.94	4.28	18.84	4.81	20.75	5.34	22.66	5.88	24.56	6.44
22	15.06	3.75	16.94	4.28	18.84	4.81	20.75	5.34	22.66	5.88	24.56	6.44
63	16.88	4.25	18.94	4.81	21.06	5.44	23.13	6.19	25.25	6.94	27.31	7.69
00	18.69	4.69	21.06	5.38	23.38	6.00	25.69	6.69	28.06	7.38	30.38	8.06

* Add for
Durcor
Flanges




* Durcor® Advanced Structural Composite Flanges are thicker than alloy flanges. Add thickness to "Normal Length" dimensions.

For more information on Durcor®-62™ see "Flexijoint with Durcor®-62™ Advanced Composite Flanges" Brochure

	7 convolutions		8 convolutions		9 convolutions		10 convolutions		11 convolutions		12 convolutions	
ERAL	ANGULAR	LATERAL	ANGULAR	LATERAL	ANGULAR	LATERAL	ANGULAR	LATERAL	ANGULAR	LATERAL	ANGULAR	LATERAL
67	60°	0.83	67°	0.94	74°	1.02	79°	1.14	84°	1.28	89°	1.41
67	56°	0.83	62°	0.94	68°	1.06	74°	1.14	80°	1.28	86°	1.41
75	52°	0.87	58°	0.98	64°	1.14	70°	1.26	76°	1.38	82°	1.50
75	47°	0.91	53°	1.02	58°	1.14	64°	1.30	70°	1.41	76°	1.53
79	44°	0.91	49°	1.02	55°	1.14	60°	1.30	65°	1.41	70°	1.53
83	39°	0.94	44°	1.06	49°	1.18	54°	1.34	59°	1.50	64°	1.66
91	38°	1.06	43°	1.22	48°	1.38	53°	1.50	58°	1.66	63°	1.81
94	34°	1.10	39°	1.26	43°	1.42	47°	1.57	51°	1.72	55°	1.88
98	30°	1.14	34°	1.30	38°	1.46	41°	1.61	44°	1.78	47°	1.94
03	26°	1.22	30°	1.38	33°	1.56	37°	1.72	40°	1.88	44°	2.09
09	24°	1.25	27°	1.44	30°	1.63	33°	1.81	36°	2.00	39°	2.19
19	21°	1.38	24°	1.56	27°	1.78	29°	1.97	31°	2.16	33°	2.34
28	18°	1.47	21°	1.69	23°	1.91	26°	2.13	28°	2.34	31°	2.56
38	17°	1.59	19°	1.81	22°	2.06	24°	2.28	26°	2.50	28°	2.72
44	16°	1.69	19°	1.91	21°	2.16	23°	2.41	25°	2.66	27°	2.91
56	16°	1.84	18°	2.09	20°	2.38	22°	2.63	24°	2.88	26°	3.13
72	15°	2.00	17°	2.28	20°	2.53	22°	2.88	24°	3.16	26°	3.44
78	14°	2.09	16°	2.38	18°	2.69	20°	2.97	22°	3.31	24°	3.63
00	14°	2.34	15°	2.66	17°	3.00	19°	3.34	21°	3.69	23°	4.06
20	14°	2.56	15°	2.95	17°	3.39	19°	3.70	21°	4.05	24°	4.44
44	14°	2.81	15°	3.19	17°	3.69	19°	4.06	21°	4.50	23°	4.94
44	14°	2.81	15°	3.19	17°	3.69	19°	4.06	21°	4.50	23°	4.94
69	14°	3.19	15°	3.56	17°	4.06	19°	4.50	21°	4.94	23°	5.38
00	12°	3.50	13°	4.00	15°	4.56	16°	5.00	17°	5.50	18°	6.00

FLEXIJOINT® V

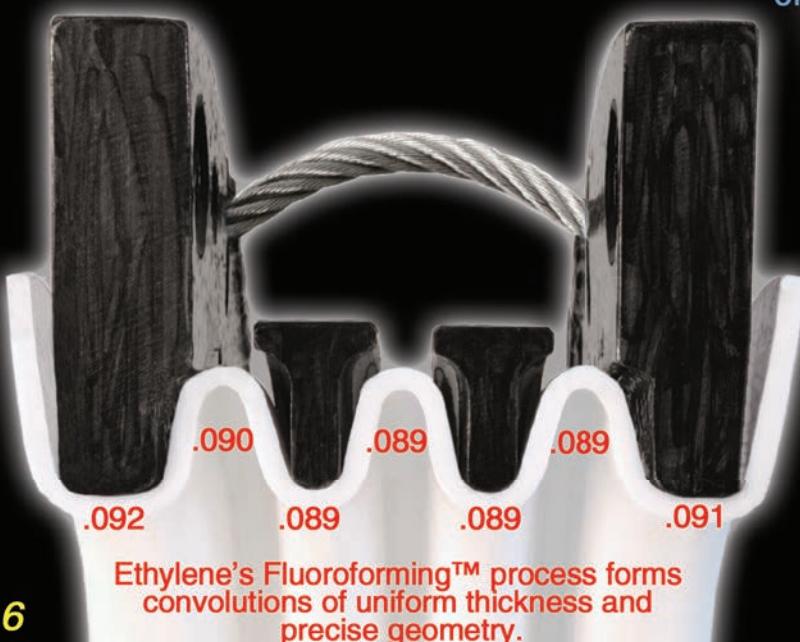

Ethylenes Fluoroforming™ process forms convolutions of uniform thickness and precise geometry.

ISOSTATIC MOLDED TUBING

Ethylenes employs only 100% virgin, high molecular weight PTFE resin in its isostatic tube molding process. No pigments, additives or lubricants whatsoever, just Pure PTFE resin.



Fluoroforming™

All Flexijoins are made by the exclusive Fluoroforming™ process, a development of Ethylene. The proprietary technique utilizes hydraulics to influence the isostatically molded tube to "form" convolutions of uniform thickness and precise geometry. Deep convolutions allow increased axial travel while reducing the force necessary to produce axial movement and lateral misalignment.

Combine all the distinctive features;

- 100% Pure PTFE
- T-Band™ root and sidewall support
- T-Band™ protection from over-compression
- LimitLink™ protection from over-expansion with the Fluoroforming™ process, and the relationship of these features provide the basis for the outstanding performance of Flexijoins.



High Performing Severe Service Longest Flex-Life

1

It all starts the

2

The

S. Competition

with
resin...

PASTE EXTRUDED TUBING

In the "Paste Extruding" process, solvent based hydrocarbon additives must be added to PTFE as a lubricant in order to facilitate the extrusion process. These solvents are not only hazardous but could also contaminate contacting fluids by leaching out or could be vulnerable to blistering. Paste extruded expansion joints are NOT Pure PTFE.




process...


Blow Molding (Contour Molding)

"Blow Molding", sometimes referred to as "Contour" molding by some manufacturers is a very economical means of manufacturing expansion joints. The process, during which a plastic parison (hollow tube) is heated above the transition temperature and is placed between two halves of a mold (cavity) and forced to assume the shape of that mold cavity by the use of air pressure. Wall thickness distribution is severely effected as shown in the expansion joint cross-section on right and below.

Contour Molding (Blow Molding) is an excellent low cost technique for products such as plastic milk jugs or soda bottles where yielding of the plastic is not a potential liability....

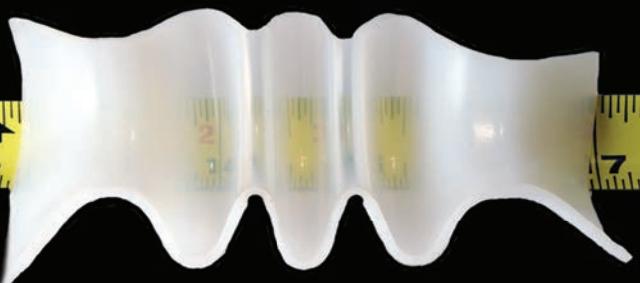

Severe thinning is evident by the translucency of the convolutions above. Permanently yielding (stretching) PTFE beyond its elastic limit will compromise the materials mechanical integrity and can cause sudden premature failure.

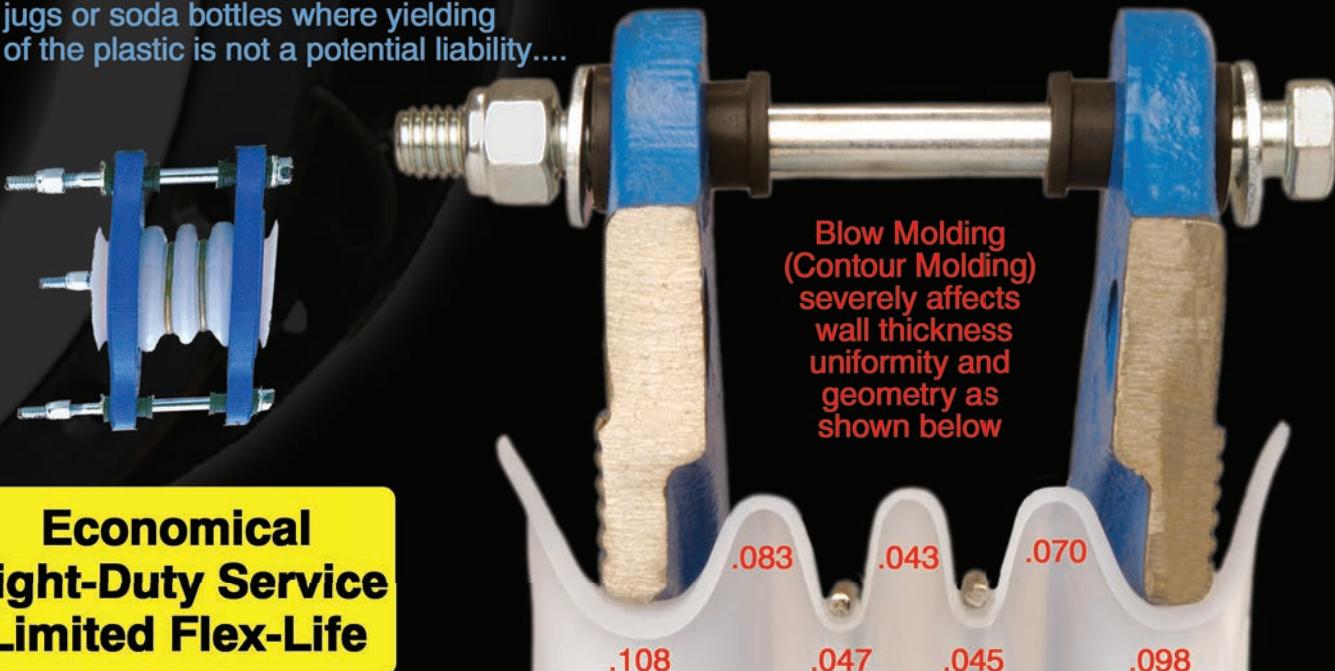

3
End
Result...

Economical
Light-Duty Service
Limited Flex-Life

FLEXJOINT®



LimitBolt



FlexArmor®



**Durcor®-62™
Composite Flanges**



AntiSquirm™



LimitLink™



AnchorBase™



Hinged



Universal



Gimbaled

ETHYLENE™
an ANDRONACO INDUSTRIES company

4855 Broadmoor Ave. - Kentwood, MI 49512
Ph (616)554-0900 FAX (616)554-3464
www.ethylene.com



ETHYLENE LLC, INFORMATION IS BASED ON TECHNICAL DATA AND TESTING THAT ETHYLENE BELIEVES TO BE RELIABLE AND IS SUBJECT TO CHANGE WITHOUT NOTICE. THE INFORMATION IS INTENDED FOR USE BY PERSONS HAVING TECHNICAL SKILL, AT THEIR OWN DISCRETION AND RISK. SINCE CONDITIONS AND USE OF PRODUCTS ARE OUTSIDE OF ETHYLENE'S CONTROL, ETHYLENE LLC, MAKES NO WARRANTIES, EXPRESS OR IMPLIED AND ASSUMES NO LIABILITY IN CONNECTION WITH ANY USE OF THIS INFORMATION. DURCOR®-62™ IS A TRADEMARK OF PUREFLEX, INC. VITON® IS A REGISTERED TRADEMARK OF DUPONT PERFORMANCE ELASTOMERS L.L.C. MONEL® IS A REGISTERED TRADEMARK OF SPECIAL METALS CORPORATION. ETHYLENE™, FLEXJOINT®, FLEXARMOR®, FLO-VU®, ETHYLARMOR®, PHAMPLER®, MONODERM™, T-LINE STRAINERS™, T-BANDS™ AND LIMITLINKS™ ARE EITHER REGISTERED OR TRADEMARKS OF ETHYLENE LLC.

FLEXI-COND - 0310-0714-06